




UNDERGLAZE DECAL INSTRUCTIONS

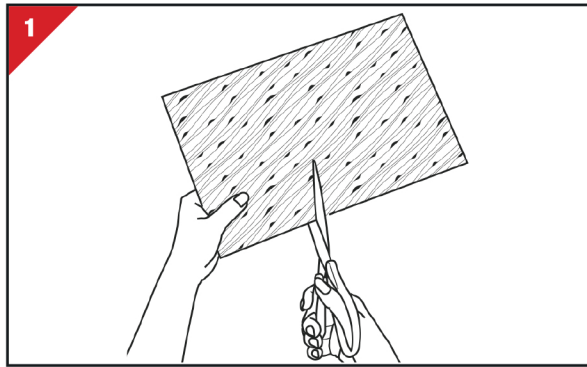


Begin by cutting the decal into the desired size you wish to apply.

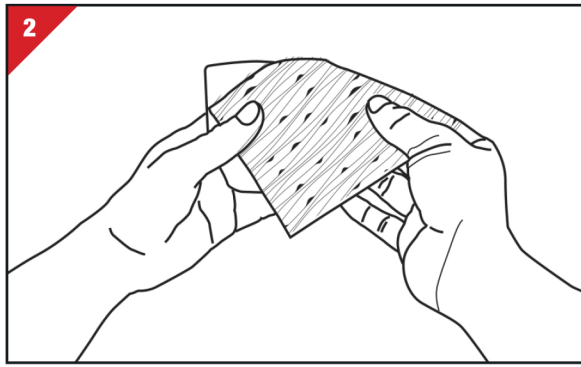


Application on bisque ware or leather hard or greenware (not bone dry). Hold the oxide bearing side of the decal against the pot.

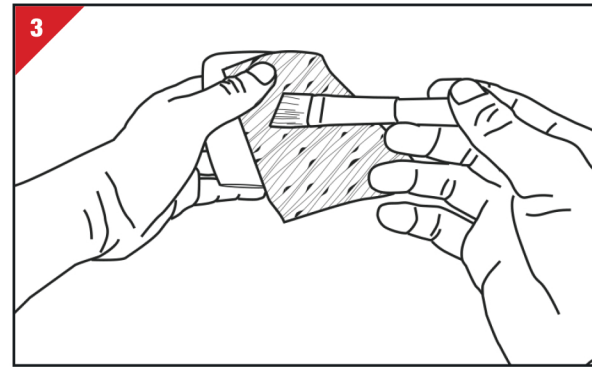


Using a wet brush, lightly stroke the decal starting from the center going outwards. Ensure entire area is damp.

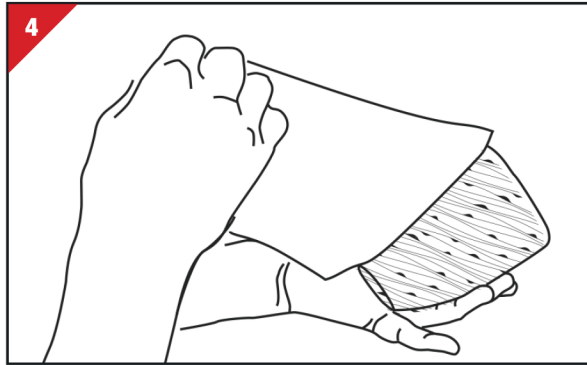

Before the sheet is dry, carefully remove decal by slowly peeling from the corner to reveal the entire print.

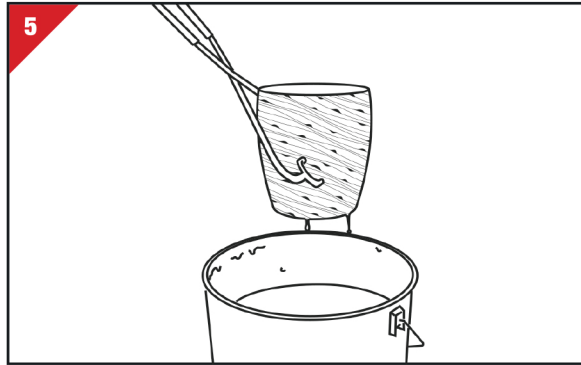

Allow the decal to completely dry then apply the desired glaze.

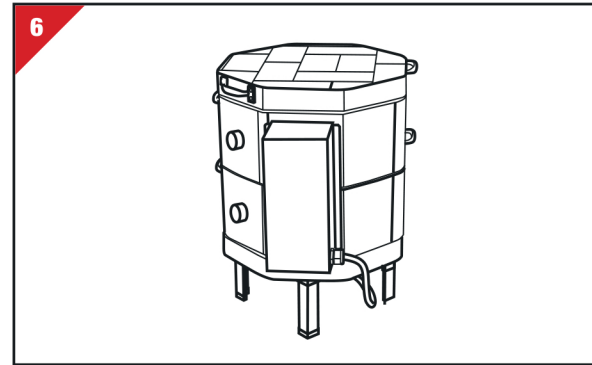

Once dry, you may fire your pottery between the temperature of Cone 04-11 (Oxidation or Reduction)

**VIDEO
TUTORIAL**



www.chinaclayart.com